

# BREAK-AWAY UNITS

## BREKSAFE



**4024**

### SA6000 BREKSAFE UNIT

- TO SUIT 2 & 4 WHEEL BRAKE
- INCLUDING:
  - 1 OFF NP7 12V BATTERY
  - 1 OFF BREAKAWAY SWITCH c/w COIL CABLE
  - SET OF MOUNTING HARDWARE
  - INSTALLATION INSTRUCTION BOOK








**4068**

### SA6000XP BREKSAFE UNIT

- TO SUIT 6 WHEEL BRAKE
- INCLUDING:
  - 1 OFF NP9 12V BATTERY
  - 1 OFF BREAKAWAY SWITCH c/w COIL CABLE
  - SET OF MOUNTING HARDWARE
  - INSTALLATION INSTRUCTION BOOK

## BREAKSAFE

	PART NUMBER	DESCRIPTION
	<b>SA5000RM</b>	5000 REMOTE MONITORS
	<b>BAT</b>	REPLACEMENT BREAKSAFE BATTERY 7 A/H - TO SUIT SA6000
	<b>BATXP</b>	REPLACEMENT BREAKSAFE BATTERY 9 A/H - TO SUIT SA6000XP
	<b>SA0172W</b>	REPLACEMENT COIL CABLE & PIN
	<b>SA0172</b>	REPLACEMENT BREAKAWAY SWITCH c/w COIL CABLE